

**Compatible with:**

Samsung Galaxy Tab Active3
(2020 SM-T575)
Samsung Galaxy Tab Active5
(2024 SM-X300)

**View Color
Instructions****Important:**

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. ProClip USA, Inc. shall have no liability for damage or injury resulting from the installation or use of any ProClip or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. ProClip USA, Inc. product warranties do not cover the installation, removal or reinstallation of any product.

Attention: Carefully read all instructions and review the images before installing this product.

Notice: It is important that the user of this product also receive these instructions. This will give the user guidance on how to use this product. Please leave these instructions with the product after installation.

Warning: Docking a tablet in a ModTek Hard Case does not require significant force. If the hard case does not line up correctly, it is difficult to dock the tablet onto the USB-C connector. Do NOT force the tablet onto the connector, simply remove the hard case and verify the alignment before docking again. Damage due to incorrect docking is not covered by warranty.

**1. ModTek Hard Case Frame:**

Place the frame face down on a flat surface to prepare it for installing the compatible tablet.

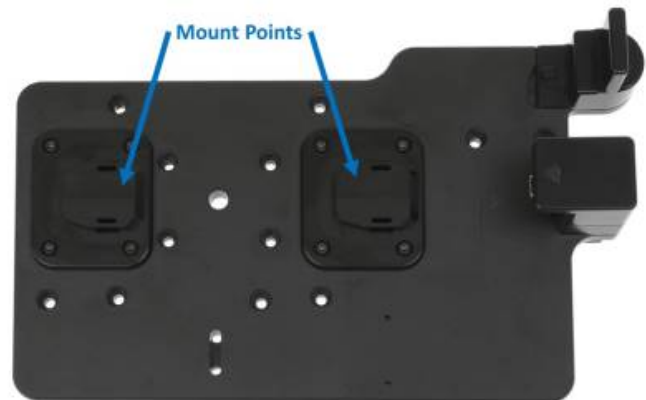
Note: Hard Cases are device specific and should only be used with the compatible tablet without any skin, case or screen protector installed.

**2. Install the Tablet:**

Place the tablet face down into the frame ensuring that it slides down into place. It should be slightly snug on the tablet sides of the tablet where it meets with the machined springs on the sides of the frame.

**3. Secure the Tablet:**

Place the backplate over the tablet and secure it using the included 10 screws. These screws go through the backplate into the frame and you will need a T10 Torx screwdriver. These screws should only be fastened to finger tight. That is 0.6 N*m or 5.3 inch-pounds of pressure when using a torque gauged tool.

**4. Mount Points:**

This ModTek USB-C 3.1 Dock supports a variety of devices when installed in the ProClip ModTek Hard Case. The two mount points are used to align the tablet with the USB-C connector to ensure a perfect alignment and ensure the USB-C connection to the tablet does not create excessive wear.

Note: ModTek USB-C Dock Not Included. Must be purchased separately.



5. Mount Points:

This ModTek USB-C 3.1 Dock supports a variety of devices when installed in the ProClip ModTek Hard Case. The two mount points are used to align the tablet with the USB-C connector to ensure a perfect alignment and ensure the USB-C connection to the tablet does not create excessive wear.

Note: ModTek USB-C Dock Not Included. Must be purchased separately.



6. Docking onto the USB-C:

Once the Hard Case is aligned by engaging both mount points, smoothly slide the tablet onto the USB-C connector until you hear an audible click. The audible click confirms the case is properly docked. Note: Do not force the tablet onto the connector. If you feel significant resistance the case is not properly aligned. Remove it and ensure alignment on both mount points before continuing.



7. Releasing the Case:

To release the case from the dock, use the quick release dial by turning it clockwise similar to turning a key. This will release the Hard Case and it will slide it slightly off the USB-C connector. Note: It is almost impossible to release the tablet without using the quick release lever and it should not be attempted.



8. Releasing from the Dock:

Switch grip from the quick release dial and place your hand on top of the case. Continue to slide the case until you see the alignment line and then pull the case towards you.

Returns

All returns must be made within thirty (30) days of the delivery date and include proof of purchase, a copy of your original order, or invoice. No products shipped hereunder may be returned without ProClip USA's prior approval. In order to return a product, the buyer must obtain an RMA number (Return Merchandise Authorization Number). **Items returned without a valid RMA number may be rejected. Items that are open, used, damaged, or returned without all original components may have a restocking fee applied.**

Limited Warranty and Liabilities

ProClip warrants that the Products will be free of defects in materials and workmanship for a period of one (1) year from the date of purchase. If any Product should become defective within the warranty period, ProClip, at its option, will replace it, repair it or refund the purchase price. Repair or replacement parts or Products will be furnished on an exchange basis and will either be new or reconditioned. All replaced Products shall become the property of ProClip. Warranty service is available to you by delivering the Product during the warranty period to the company it was purchased from or to ProClip at 4915 Voges Rd., Madison, WI 53718 USA and providing proof of purchase, price and date. If shipped to ProClip, the buyer must first call ProClip at +1 800-296-3212 or e-mail ProClip at returns@proclipusa.com to obtain a return approval and return number. You will bear all shipping, packaging and insurance costs and all other costs, excluding labor and parts, necessary to effectuate repair, replacement or refund under this warranty. For more information on how to obtain warranty service, write, e-mail or telephone ProClip at 4915 Voges Rd., Madison, WI 53718 USA. Tel: +1 800-296-3212, e-mail: returns@proclipusa.com.

THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCT WHICH HAS BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE OR AS A RESULT OF UNAUTHORIZED SERVICE. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES FOR THIS PRODUCT. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT SHALL HAVE NO GREATER DURATION THAN 1 YEAR FROM THE DATE OF PURCHASE. IN THE EVENT THIS PRODUCT BECOMES DEFECTIVE DURING THE WARRANTY PERIOD, THE PURCHASER'S EXCLUSIVE REMEDY SHALL BE REPAIR, REPLACEMENT OR REFUND AS PROVIDED ABOVE. IN NO EVENT SHALL PROCLIP BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION LOSS OF PROPERTY, ARISING FROM BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY. PROCLIP DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE SET FORTH ABOVE. IN NO EVENT WILL PROCLIP BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, INDIRECT, SPECIAL, PUNITIVE, OR EXEMPLARY DAMAGES, INCLUDING ATTORNEY FEES ARISING OUT OF THE USE OF OR THE INABILITY TO USE THE PRODUCTS, OR FOR ANY CLAIM BY ANY OTHER PARTY, EVEN IF PROCLIP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Regulatory information: www.proclipusa.com/regulatory.html

ProClip USA, LLC • 4915 Voges Road • Madison, WI 53718 • USA

Office: +1 608-807-5320 • Fax: +1 920-372-0066 • Toll free: 800-296-3212 • Internet: www.proclipusa.com