


RM SERIES

ASSEMBLY INSTRUCTIONS FOR "HALF WIDTH" RM1U, RM2U AND RM3U ENCLOSURES

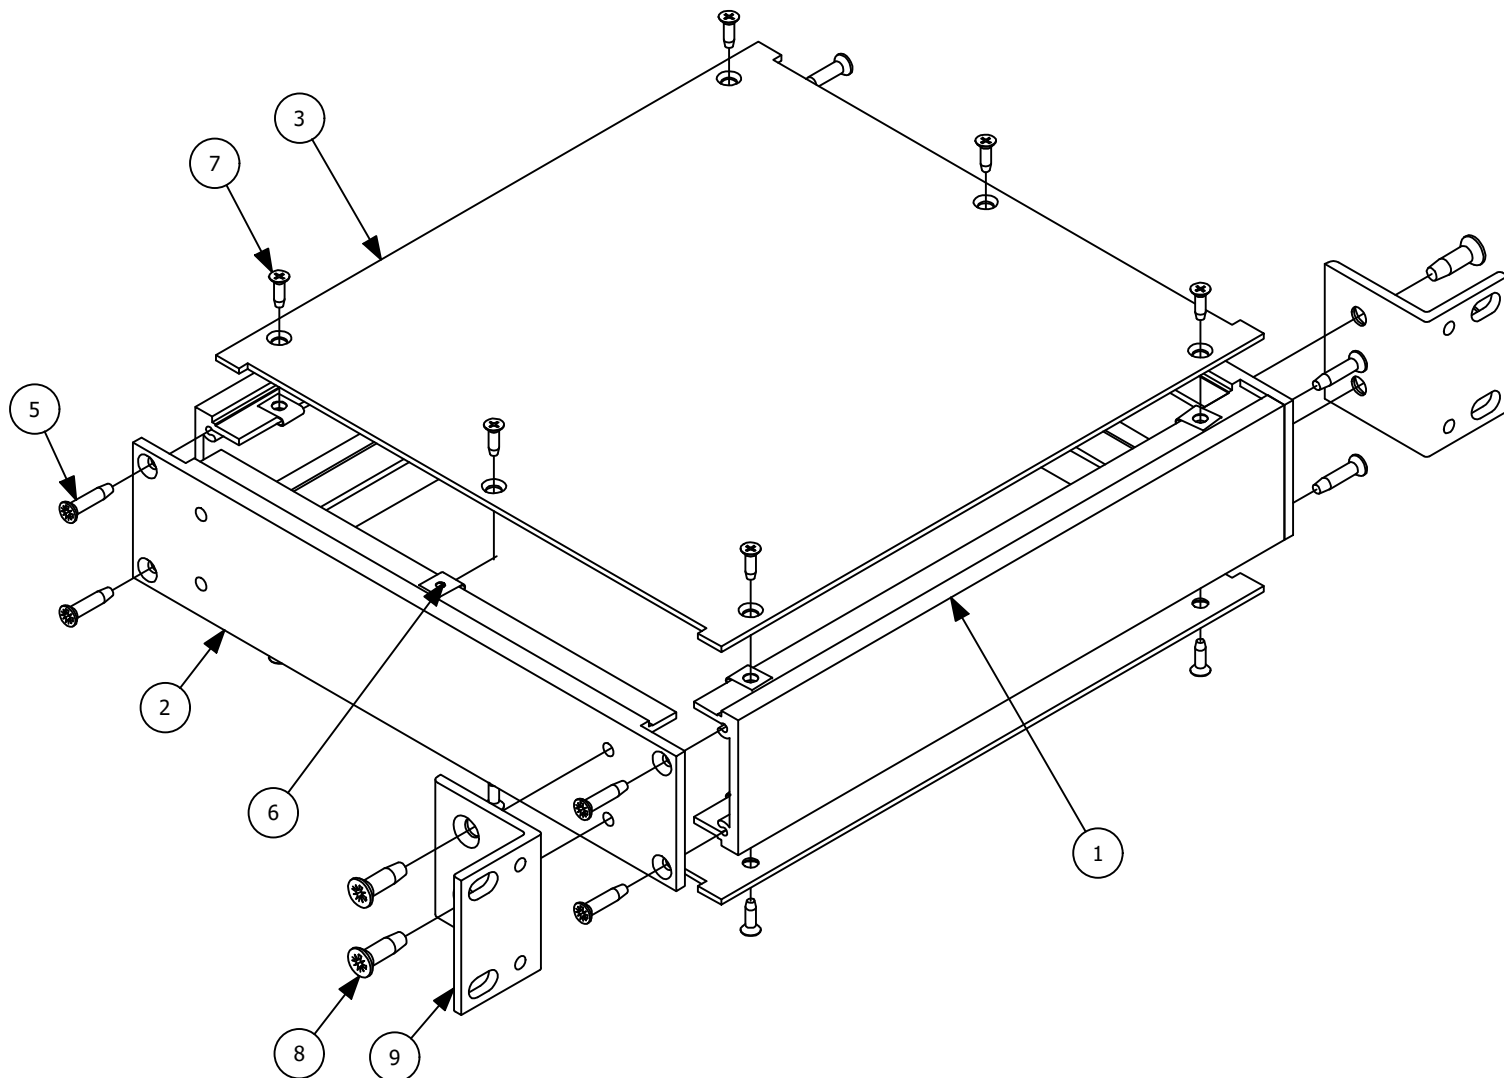

PART#	QTY	DESCRIPTION
1	2	FRONT & REAR PANELS
2	2	SIDE PANELS
3	2	TOP & BOTTOM PLATES
4	4	RUBBER FEET (SELF ADHESIVE)
5	8	6-32 x 3/8" SELF TAPPING SCREWS
6	8 or 12	4-40 SPEED NUTS
7	8 or 12	4-40 x 3/8" MACHINE SCREWS
8	4	10-32 x 3/8" MACHINE SCREWS *(NOT SUPPLIED)
9	2	MOUNTING BRACKETS *(NOT SUPPLIED)

ASSEMBLY INSTRUCTIONS

A) ASSEMBLE THE FRONT & REAR PANELS (PART 1) TO THE SIDE PANELS (PART 2) USING #6 x 3/8" SELF-TAPPING SCREWS (PART 5).

B) SLIDE THE #4 SPEED NUTS (PART 6) OVER THE HOLES ON THE FRONT, REAR, AND SIDE PANEL AS SHOWN

C) ASSEMBLE THE TOP & BOTTOM PLATES (PART 3) TO THE PANEL FRAME ASSEMBLY THROUGH THE SPEED NUTS USING THE #4 x 3/8" MACHINE SCREWS (PART 7).

D) ADD THE MOUNTING BRACKETS (PART 9) TO THE CASE ASSEMBLY USING THE #10-32 x 3/8" SCREWS (PART 8). *(OPTIONAL-NOT SUPPLIED)

E) MOUNT THE SELF-ADHESIVE RUBBER FEET (PART 4) ONTO THE DESIRED LOCATIONS. (OPTIONAL)

Tool Box



#1 & #2 Phillips
Head Screw Driver



HAMMOND
ENCLOSURES