



DTFK1AC120E ASSEMBLY INSTRUCTIONS TO PFA20000 (NWC SERIES)


ASSEMBLY INSTRUCTIONS

STEP 1 - Align DTFK1AC120E housing assembly with screws to mounting holes at the back of PFA20000 as shown

STEP 2 - Use #1 Drive Philips screw driver to install 4 M3x0.5 X 50mm screws into PFA200000

STEP 3 - Start with one screw to align and secure the components, then secure the other 3 screws. Torque to 4 in/lb MAX

PFA20000XX
MOUNTING
HOLES

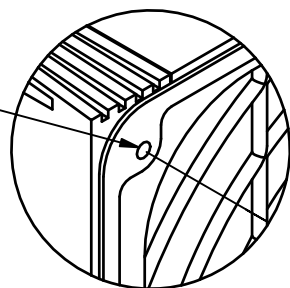

DETAIL A

SAMPLE PLATE
(NOT INCLUDED)

DTFK1AC120E
HOUSING ASSEMBLY

M3x0.5 x 50mm
SCREWS (4x)

PFA20000XX

